

QUICK REFERENCE GUIDE



STEP 1: TURN THE SYSTEM ON

Turning ON the PCS-1/PCS-11

- Make sure the power switch on the side of the unit is ON.
- If the power indicator light is orange, press the power button on the Remote Commander® Controller.
- If after 6 seconds you do not see the main menu, make sure the TV monitor is on and the correct input of the TV is selected.



Main Menu

STEP 2: STARTING THE MEETING

Using Phone Book

- Use the navigation buttons on the Remote Commander Controller to select the PHONE BOOK, then press ENTER.
- Select the person you want to call and press ENTER.
- Select "Dial" and press ENTER again.

Using Manual Dial

- Using the number keys, begin entering the number you wish to call. The "Manual Dial" screen will automatically be displayed.
- Select the Line interface (IP or ISDN).



Phone Book

STEP 3: ENDING THE MEETING

Disconnecting

- To disconnect, press the CONNECT/DISCONNECT button on the Remote Commander Controller.
- Select the OK to disconnect and end the meeting.



Power Button

Navigation

Connect/
Disconnect

Number Keys

Help Button


Remote Commander Controller

STEP 4: POWERING OFF

Powering Off the Unit

- Press the power button to put the unit in standby mode.
- To completely power down the system, set the switch on the side of the unit to the OFF position.

QUICK REFERENCE GUIDE

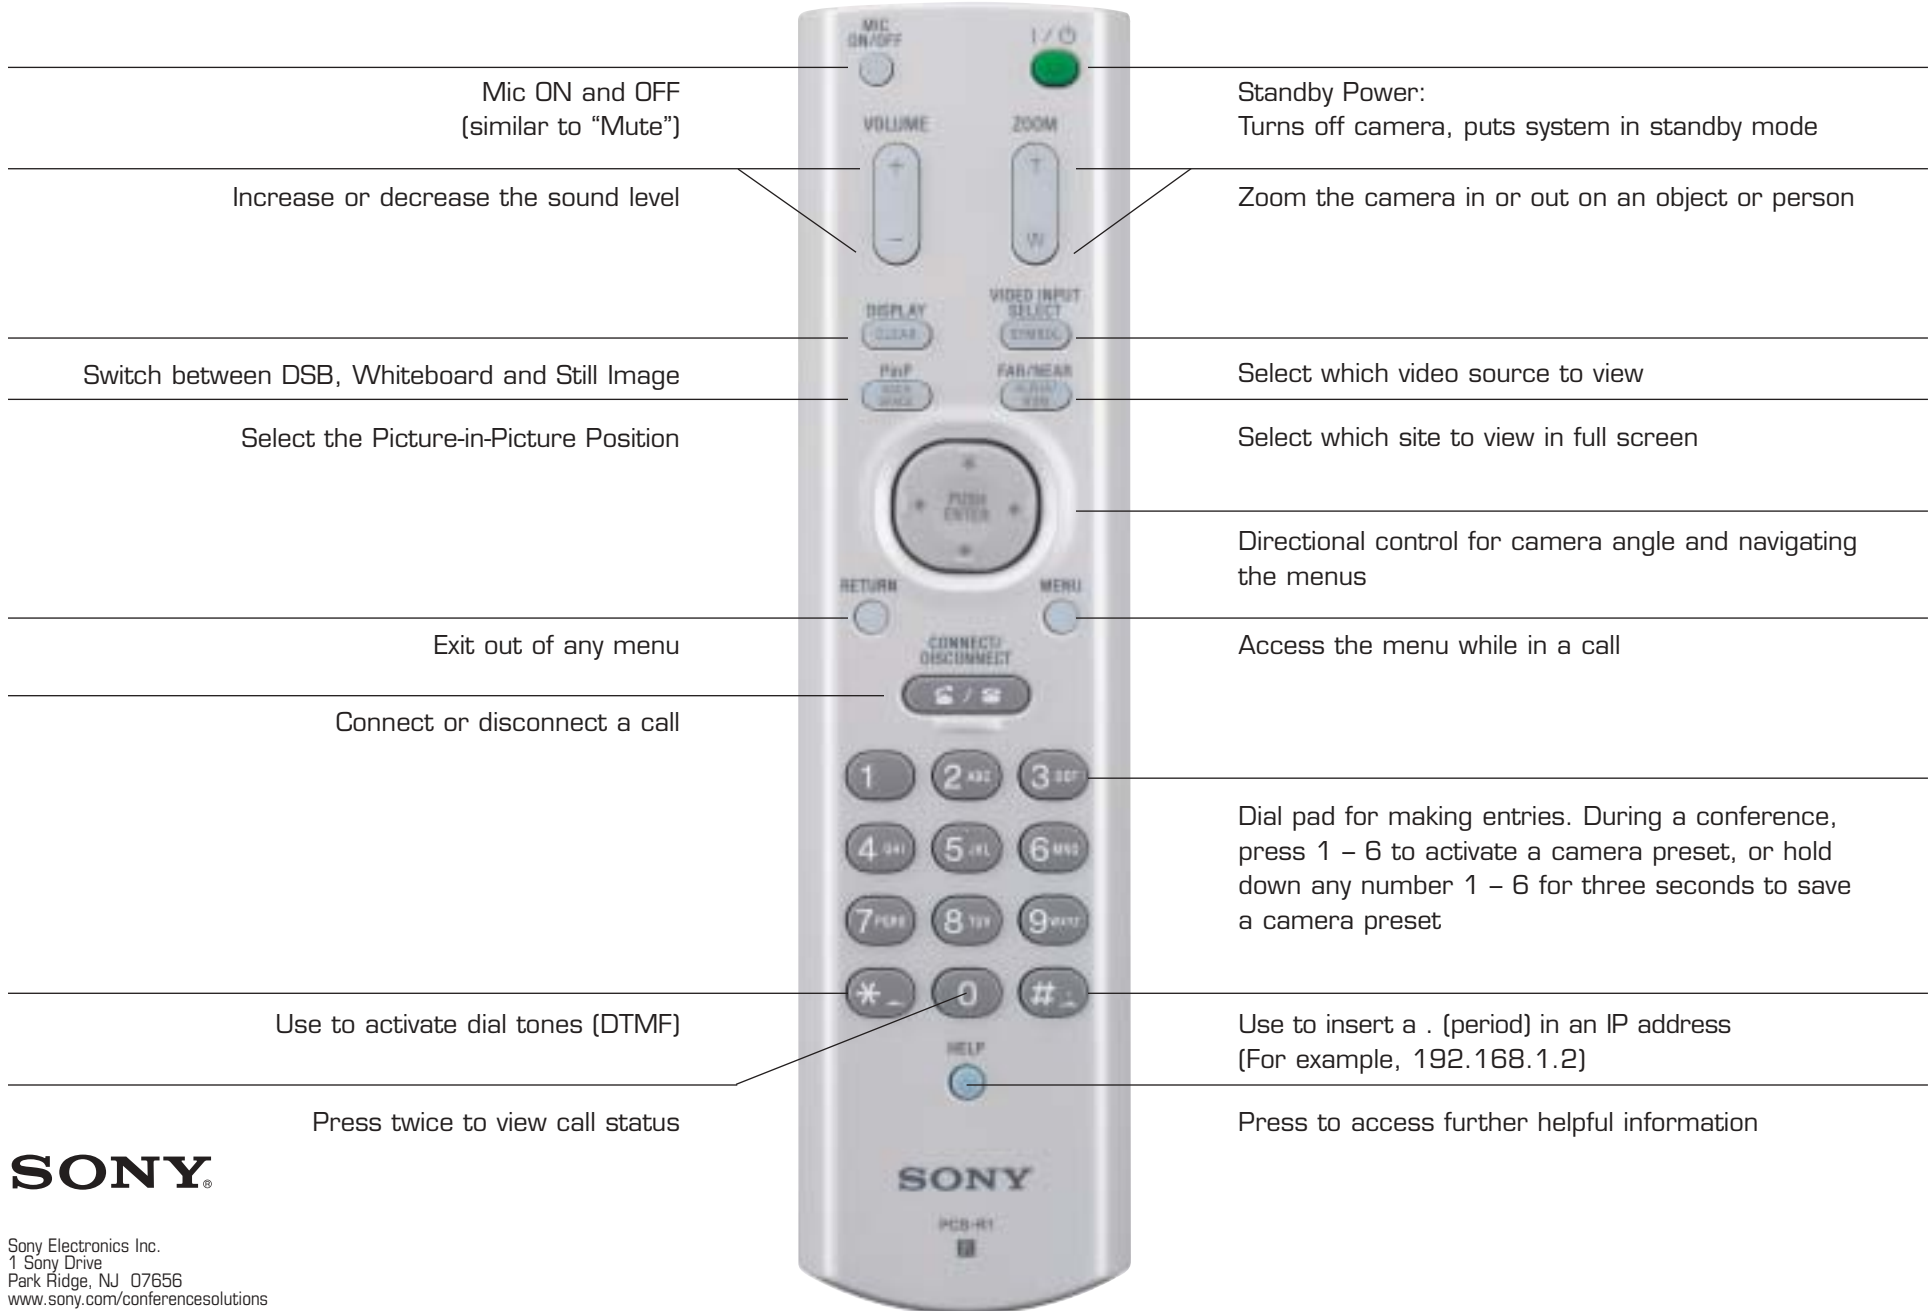

SONY®

Sony Electronics Inc.
 1 Sony Drive
 Park Ridge, NJ 07656
www.sony.com/conferencesolutions