

Quick Connection Guide Using Speed Dial

For details on operations, refer to the Operating Instructions (stored in the supplied CD-ROM).

To begin with

Turn on your Video Communication System and TV monitor, and check the following to ensure that connection is possible.




① Is the picture of your camera (local picture) on the monitor screen?

Note: Connection to a remote party is not possible if neither the IP address nor ISDN indicator is displayed.

② Select "Information" and press PUSH ENTER

 ③ **When using the LAN**
Is the LAN indicator highlighted and is the IP address displayed?




③ **When using the ISDN**
Are one or more ports of the ISDN indicator highlighted?

Main indicators that appear during communication

	Controlling a remote camera
	Local microphone is turned off
	Sending a still image
	Receiving a still image
	Sending or receiving a computer screen
	Sending or receiving data from a whiteboard
	Sending dual video


After checking...

Let's connect

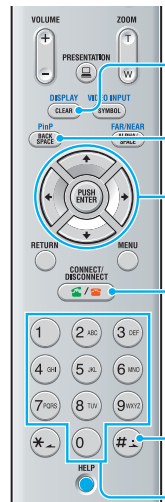


- DISPLAY (CLEAR) button
- PinP (BACKSPACE) button
- ↑/↓/←/→ (arrow) buttons and PUSH ENTER button
- CONNECT/DISCONNECT button
- # . button (enter dot)
- Number buttons

1 Verify the "LINE I/F".

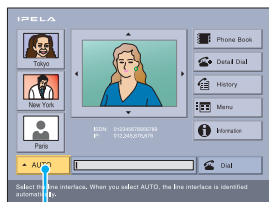


Line I/F

 

Select the type of line to use.

2 Select the Number text box and press PUSH ENTER.

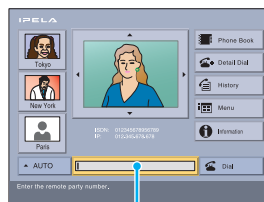

Number text box



Enter the IP address or line number.


3 Select "Dial" and press PUSH ENTER.



Dial

Or press

4 The system dials and establishes communication.

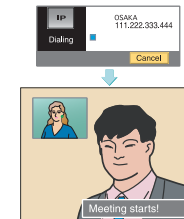


Remote Commander Guide: Operations available during communication

For details on operations, refer to the Operating Instructions (stored in the supplied CD-ROM).

Switching the picture on the TV monitor

Each press of DISPLAY switches the picture.

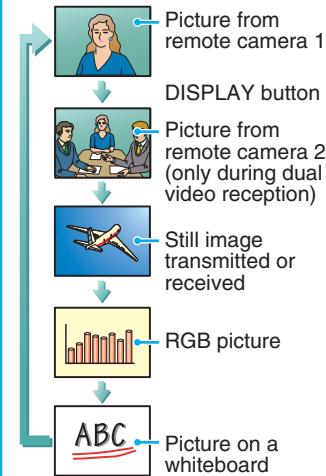


Note: You can switch among the available pictures only.


Switching on/off the local microphone

Sending/stopping image transmissions from devices connected to the Data Solution Box

Adjusting the sound of the remote party

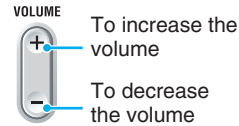


Adjusting the camera zoom

 

Selecting the input picture

 Select the "Near" (local) picture and the "Far" (remote) picture.



MAIN CAMERA: Selects the video from the MAIN CAMERA.

SUB CAMERA: Selects the video from the SUB CAMERA.

AUX1: Selects the video from the device connected to the MAIN AUX IN connector.

AUX2: Selects the video from the device connected to the SUB AUX IN connector.

IR1: Selects the video from the optional PCS-DS150 Document Stand.


IR2: Selects the video from the optional PCS-DS150 Document Stand.

Displaying the menu available during communication

Ending the conference



Selecting the displayed picture and the camera

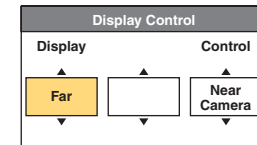


Display: Select the "Near" or "Far" picture to be displayed on the monitor screen.


Control: Select the "Near Camera" or "Far Camera" to be controlled.

Changing the location of the window picture


Each press of PinP changes the location of the window.

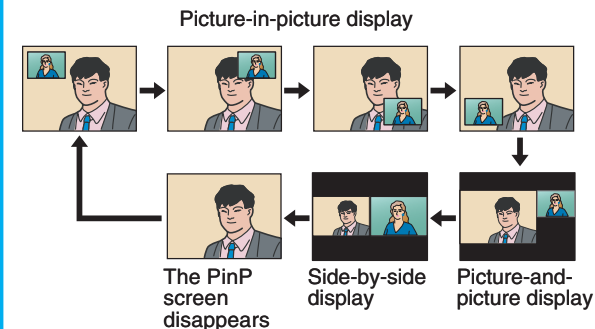

Adjusting the camera angle

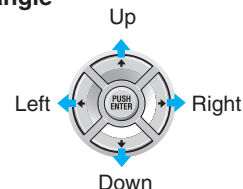

Using convenient functions

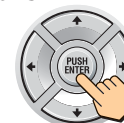

A submenu opens to enable sending of still images, etc.

Presetting the camera angle

Press button 1 to 6 quickly to move the camera to the preset position. Hold down button 1 to 6 to preset the current camera position.

Note: If you press button 1 to 6 quickly when there is no preset setting, the camera moves to the center position.