

## PCS-XG Series Remote Commander key code list

Order of key layout	
KEY NAME	CODE [HEX]
PRESENTATION	6B
POWER	15
F1	5F
F2	60
F3	61
F4	62
LAYOUT	68
VIDEO INPUT	41
CAMERA	17
VOLUME +	12
VOLUME -	13
ZOOM T	1E / 90
ZOOM W	1F / 90
CURSOR UP	6F / 90
CURSOR LEFT	7B / 90
CURSOR RIGHT	73 / 90
CURSOR DOWN	77 / 90
ENTER	6E
RETURN	66
TOOLS	3A / 90
CONNECT	11
DISCONNECT	2D
BACK SPACE	34
1	00 / 90
2	01 / 90
3	02 / 90
4	03 / 90
5	04 / 90
6	05 / 90
7	06
8	07
9	08
0	09
*	0A / 90
#	0B / 90
MIC ON/OFF	10

Order of code	
CODE [HEX]	KEY NAME
00 / 90	1
01 / 90	2
02 / 90	3
03 / 90	4
04 / 90	5
05 / 90	6
06	7
07	8
08	9
09	0
0A / 90	*
0B / 90	#
10	MIC ON/OFF
11	CONNECT
12	VOLUME +
13	VOLUME -
15	POWER
17	CAMERA
1E / 90	ZOOM T
1F / 90	ZOOM W
2D	DISCONNECT
34	BACK SPACE
3A / 90	TOOLS
41	VIDEO INPUT
5F	F1
60	F2
61	F3
62	F4
66	RETURN
68	LAYOUT
6B	PRESENTATION
6E	ENTER
6F / 90	CURSOR UP
73 / 90	CURSOR RIGHT
77 / 90	CURSOR DOWN
7B / 90	CURSOR LEFT

Note: 0x90 is a stop code